



169 00 060
31cmスクエアプレート
D-31.2 H-4 **¥6,900**

169 00 061
26.5cmスクエアプレート
D-26.5 H-3.2 **¥4,100**

169 00 063
23cmスクエアプレート
D-23.1 H-2.8 **¥3,300**

169 00 064
20cmスクエアプレート
D-20.1 H-2.4 **¥2,600**

169 00 065
18cmスクエアプレート
D-18.3 H-2.2 **¥2,200**

169 00 066
16cmスクエアプレート
D-16.1 H-2.2 **¥1,800**



169 00 045
33cm角プラター
L-33 S-22.1 H-3.2 **¥5,300**



169 00 046
30.5cm角プラター
L-30.4 S-20.2 H-2.8 **¥4,200**



169 00 047
28cm角プラター
L-28 S-18.7 H-2.7 **¥3,500**



169 00 094
33cm細長角プラター
L-33.2 S-12.4 H-2.7 **¥3,500**



169 00 095
30.5cm細長角プラター
L-30.2 S-11.4 H-2.3 **¥2,600**



169 00 011
23cmスクエア深皿
D-23.2 H-4.7 **¥3,800**



169 00 012
21cmスクエア深皿
D-21 H-4.3 **¥2,900**



169 00 023
18cmボウル
D-18 H-5.6 **¥2,500**



169 00 024
16cmボウル
D-16.2 H-4.9 **¥2,100**



169 00 025
14cmボウル
D-14.1 H-4.4 **¥1,800**



169 00 026
12cmボウル
D-12.3 H-3.7 **¥1,400**



169 00 027
10cmボウル
D-10 H-3.2 **¥1,100**



169 00 028
8cmボウル
D-8.3 H-2.8 **¥950**



169 00 037
10.5cm深ボウル
D-10.7 H-5.8 **¥1,400**



169 00 038
9cm深ボウル
D-9.1 H-5.1 **¥1,200**



 
169 00 039
7.5cm深ボウル
D-7.6 H-4.5 **¥1,000**



169 00 018
9cmスクエア深皿
D-9 H-2 **¥1,000**



169 00 097
3連菜
L-25 S-8.3 H-2.8 **¥2,400**



169 00 098
2連菜
L-16.8 S-8.3 H-2.8 **¥1,500**



169 00 092
4菜皿
D-27.3 H-1.5 **¥4,400**



169 00 091
3菜皿
L-32 S-12 H-1.5 **¥3,600**



169 00 052
コーヒーカップ
L-12 S-9.5 H-7.4 C-176cc **¥1,000**

169 00 055
コーヒーソーサー
D-12.8 H-1.6 **¥950**