



134 25 002
27cmディナー皿
D-27.2 H-2.7
¥2,200



134 25 003
25.5cmディナー皿
D-25.6 H-2.6
¥2,000



134 25 004
23cmミート皿
D-23.4 H-2.2
¥1,300



134 25 005
21cmミート皿
D-21.3 H-2.2
¥1,100



134 25 006
20cmケーキ皿
D-19.8 H-2
¥1,000



134 25 007
17.5cmケーキ皿
D-17.7 H-1.8
¥850



134 25 008
16cmパン皿
D-16 H-1.7
¥700



134 25 042
32.5cmプラター
L-32.6 S-22.8 H-3.9
¥4,400



134 25 044
29cmプラター
L-29 S-20.1 H-3.6
¥3,300



134 25 045
26.5cmプラター
L-26.5 S-18.2 H-3.4
¥2,900



134 25 022
22cmスープ/バスタ
D-22.3 H-5.2
¥1,500



134 25 023
19cmスープボウル
D-19.2 H-4.4
¥1,300



134 25 024
15.5cmフルーツボウル
D-15.5 H-5.1
¥1,000



107 25 010
25.5cm/バスタボウル
D-25.5 H-5.1
¥2,200



107 25 011
24cmバスタボウル
D-24.1 H-4.9
¥2,000



107 25 012
22.5cmバスタボウル
D-22.5 H-4.6
¥1,600



134 25 016
12.5cmディップ
D-12.6 H-2.7
¥850



134 25 086
オブロングラタン
L-19.4 S-11.4 H-3.7
¥1,800



134 25 056
片手スープカップ
L-14 S-11.8 H-6.6
C-350cc
¥1,500



134 25 054
両手スープカップ
L-16.8 S-11.8 H-6.6
C-350cc
¥1,600



 
134 25 062
高台スタックコーヒーカップ
L-10.9 S-8.3 H-6
C-185cc
¥1,100




134 25 052
コーヒーカップ
L-10.7 S-8.4 H-6.7
C-170cc
¥900




134 25 053
ティーカップ
L-11.8 S-9.5 H-6.1
C-225cc
¥900




161 25 055
モア兼用ソーサー
D-15.3 H-2.5
¥650

 


161 25 055
モア兼用ソーサー
D-15.3 H-2.5
¥650

 

161 25 055
モア兼用ソーサー
D-15.3 H-2.5
¥650

 

134 25 055
兼用ソーサー
D-15.2 H-1.9
¥600

 

134 25 055
兼用ソーサー
D-15.2 H-1.9
¥600



134 25 050
マグカップ
L-11.3 S-8.8 H-9.2
C-315cc
¥1,000



134 25 060
シュガー
D-8.3 H-9.3
C-255cc
¥2,100



134 25 063
クリーマー
L-11.1 S-6.3 H-7.6
C-180cc
¥1,900



134 25 035
スタックスープボウル
D-10.3 H-6.3
C-260cc
¥900



134 25 098
7.5cmソースカップ
D-7.6 H-4.4
¥700



134 25 099
6cmソースカップ
D-6.2 H-3.6
¥600