



570 00 002
27.5cmプレート
D-27.5 H-3.5 ￥1,700



570 00 003
24.5cmプレート
D-24.8 H-3.3 ￥850



570 00 005
21.5cmプレート
D-21.5 H-2.8 ￥650



570 00 006
20cmプレート
D-20 H-2.6 ￥600



570 00 007
17.5cmプレート
D-17.8 H-2.4 ￥500



570 00 008
15.5cmプレート
D-15.7 H-2.0 ￥450



570 00 012 26.5cmスープボウル
D-26.6 H-4.4 ￥1,800



570 00 013 24.5cmスープボウル
D-24.8 H-4.4 ￥1,300



570 00 018 15cmフルーツボウル
D-15 H-5 ￥550



586 00 042
33cmプラター
L-33 S-23 H-3.6 ￥3,300



586 00 043
29cmプラター
L-29.1 S-20.3 H-3.3 ￥2,400



586 00 044
26cmプラター
L-26.2 S-18.3 H-3.3 ￥1,800



586 00 045
23cmプラター
L-23 S-16.1 H-2.7 ￥1,300



586 00 046
17cmプラター
L-17.1 S-11.9 H-2.2 ￥1,000



570 00 064
27.5cmスクエアープレート
D-27.5 H-3.5 ￥2,700



570 00 065
23.5cmスクエアープレート
D-23.8 H-3.2 ￥2,300



570 00 067
21cmスクエアープレート
D-21 H-2.9 ￥1,900



586 00 051 カプチーノカップ
L-11.8 S-9.4 H-6.3 C-245cc ￥800

570 00 055 兼用ソーサー^{兼用ソーサー}
D-15.3 H-2.1 ￥450



586 00 052 コーヒーカップ
L-11.4 S-9 H-5.9 C-205cc ￥700

570 00 055 兼用ソーサー^{兼用ソーサー}
D-15.3 H-2.1 ￥450